

	Turn left LED off
Jok -	Веер
	Play a whole C
	Play a whole B
	Play a whole A
	Play a whole G

Play a whole F
Play a whole E
Play a whole D
Play a whole middle C
Play a whole low B

	Play a half C
	Play a half B
	Play a half A
	Play a half G
G G	Play a half F


Play a half E
Play a half D
Play a half middle C
Play a half low B
Play a quarter C
Play a quarter B


	Play a quarter A
	Play a quarter G
	Play a quarter F
6 .	Play a quarter E
	Play a quarter D
	Play a quarter middle C

Play a quarter low B
Play an eighth C
Play an eighth B
Play an eighth A
Play an eighth G
Play an eighth F

	Play an eighth E
	Play an eighth D
	Play an eighth middle C
	Play an eighth low B
6 -	Play a whole rest
6 -	Play a half rest

	Play quarter rest
67	Play a eighth rest
6 #	Play the next note as a sharp
	Set music tempo to slow
	Set music tempo to normal
	Set music tempo to fast

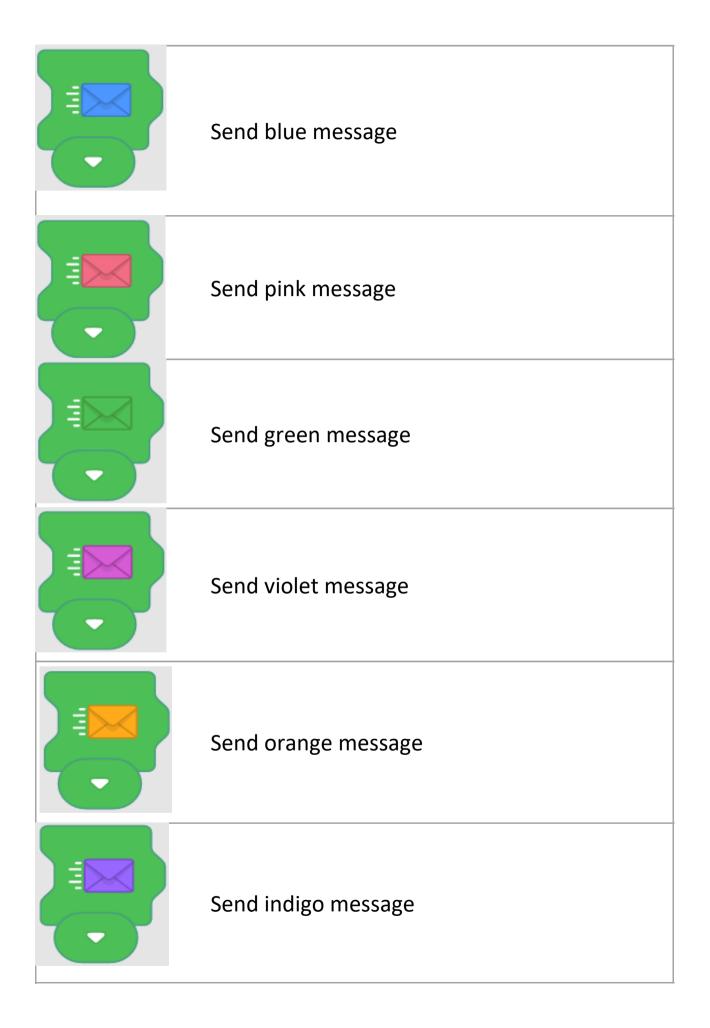

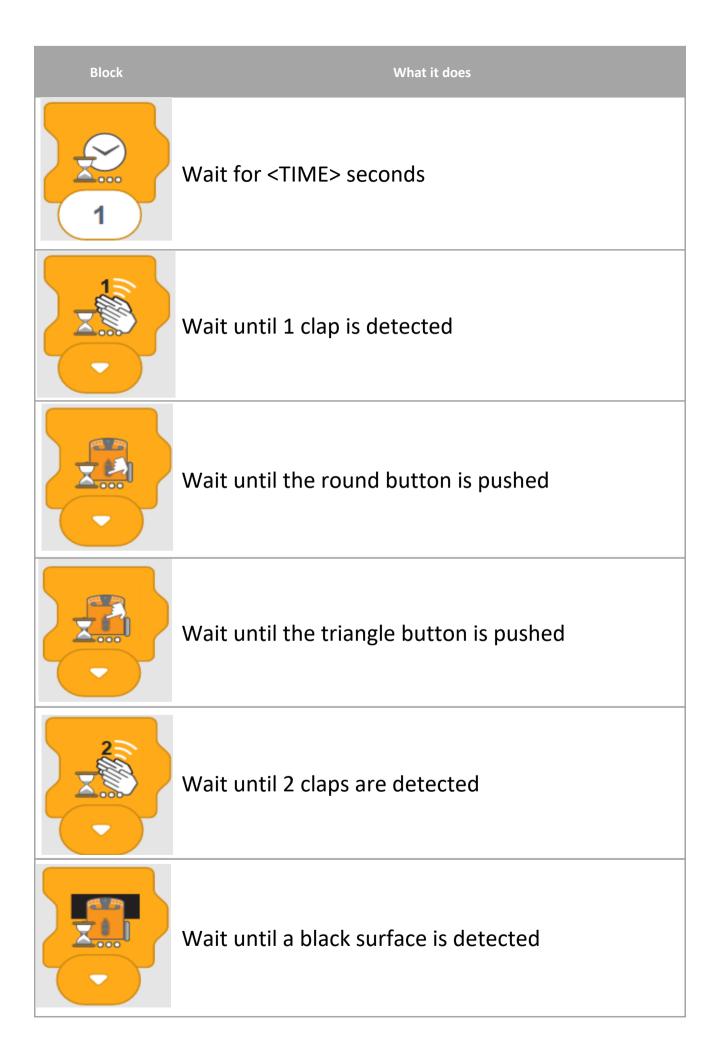



Wait until the green message is received
Wait until the violet message is received
Wait until the orange message is received
Wait until the indigo message is received

Block	What it does
)) :	Loop forever
	Loop <number> times</number>
	Loop until the round button is pushed
	Loop until the triangle button is pushed
	Loop until an obstacle is detected
	End program

Block	What it does
	Start when an obstacle is detected
	Start when 1 clap is detected
25	Start when 2 claps are detected
	Start when the triangle button is pushed
	Start when the round button is pushed
	Start when a white surface is detected
	Start when a black surface is detected
	Start when the blue message is received



