 
 


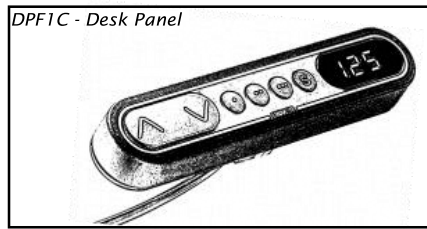 


Tilt Trolley Quick Start Guide

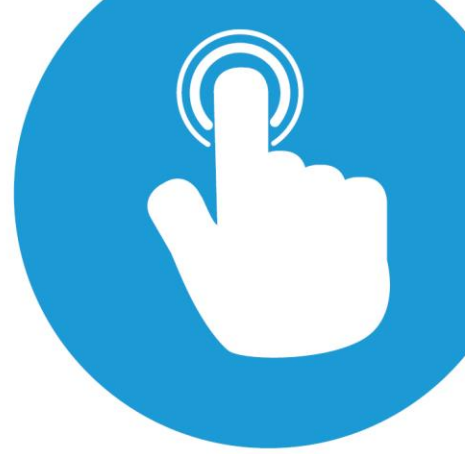

Tilt Trolley Control User Guide

- ^ = Parallel Up
- V = Parallel down
- ⊙ = Toggle button
- S = Store memory
- = Memory 1
- = Memory 2

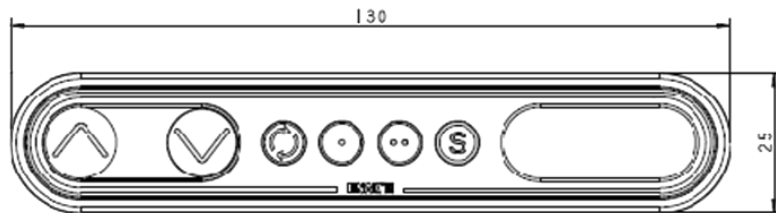

Toggle Function:

The DPF4T uses a toggle button is replaced by a toggle button to allow the Up and Down to have multiple functions

Up and Down:

You just either have to activate the up or down button for parallel drive and the system will drive until releasing the button again or when the system reaches end position.

Memory:

The three small buttons are used for memory drive and storing memory.

Store memory

- Press S – button, the display will flash for 2 seconds
- Within these two seconds press one of the small buttons with dots and the position will be stored at this button 1A.
- The panel will acknowledge by showing "1" or "2" in the display depending on the chosen position

Memory drive (small buttons with dots)

Press one of the memory buttons and the system will start driving to the pre-programmed memory position. Keep the button pressed until the position is released