



Sound Bar

Fitting Instructions

Fitting the Sound bar

What you should have

- Sound bar
- Mounting bracket
- 2 x Connecting cables

CLASSIC

- 2 x M5 screws, nuts and washers
- 2 x #8 self tapping screws


PULSE

- 4 x M4 Screws

Where to fit the Sound bar

The Sound bar can be fitted to the lower or upper edge of the Classic or Pulse panel and the upper edge only of the ClassMate.

In a classroom it may be preferred to mount the Sound Bar on top of the Classic or Pulse because this will allow the sound to project further and prevent it getting damaged by students.

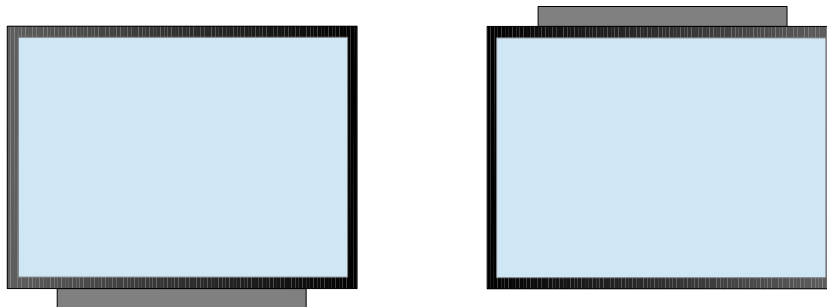


How to fit the bracket

The edge of the bracket with the ten holes is fixed to the frame of the screen as shown below. The ten holes allow the same bracket to be fitted to 60", 75", 80", 85" and 90" Classic models.


Remove two M4 screws under the bottom edge as shown.

Fit the supplied self-tapping screws to replace M4 screws removed in the first step.

Tighten firmly, but do not over-tighten as you could strip the internal thread in the panel.

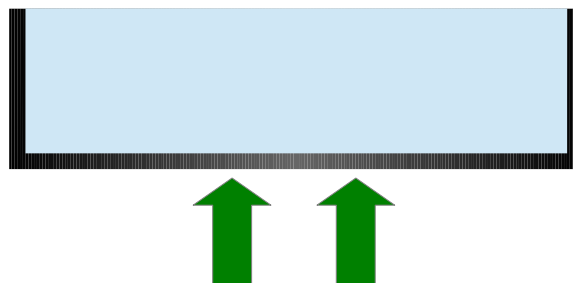

Fitting the Sound bar to the bracket and panel

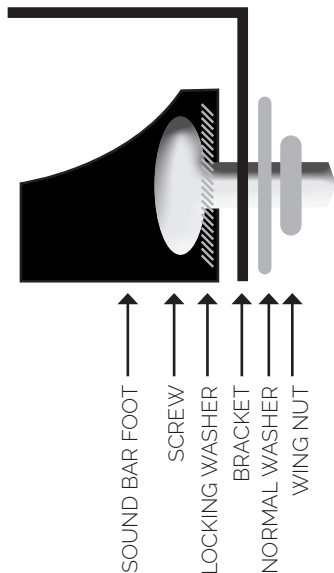

CLASSIC

Fit the heads of the supplied M5 screws together with the star washers to the keyhole slots in the soundbar fixing feet.

Pass the threaded ends of the screws through the matching holes in the mounting bracket and fit the two M5 wingnuts and flat washers.

Tighten the wingnuts so that the edge of the soundbar engages with the groove in the panel's surround.

Using the supplied cables, connect the soundbar to the SPEAKER OUT terminals on the panel.



PULSE

Align each bracket with the corresponding two holes on the back of the Pulse. Ensure that the open part of the C bracket is facing towards the front of the screen and close to the bottom of the screen.


Insert the two M4 screws on each bracket and tighten into place. Slide the Sound Bar from one end, through the C brackets until centred. The top of the Sound Bar should be touching the bottom of the screen. If this is not the case, lower or raise the bracket by using alternate mounting holes.

Using the supplied cables, connect the soundbar to the SPEAKER OUT terminals on the panel.



CLASSMATE (top mounted)

Remove the two screws on the top, rear of the ClassMate. Align the bracket with the two holes you've just removed screws from. Ensure that the open part of the C bracket is facing towards the front of the screen and close to the bottom of the screen.

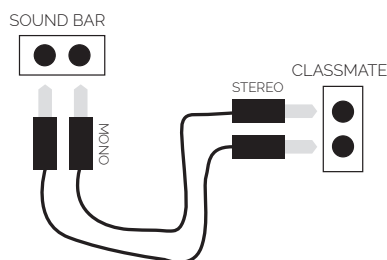

Reinsert the same screws on each bracket and tighten into place. Slide the Sound Bar from one end, through the C brackets until centred. The bottom of the Sound Bar should be touching the top of the screen. If this is not the case, lower or raise the bracket by using alternate mounting holes.

Using the supplied cables, connect the soundbar to the SPEAKER OUT terminals on the panel.

CommBox Pty Ltd
CommBox Pty Ltd, PO Box 6667, Frenchs Forest NSW 2086,
Tel: (02) 9975 6001 | info@commbox.com.au

commBOX.com.au