

 
43MDO70FA55 Quick Start Guide.

- 1. Avoid placing the sign on uneven surfaces including moving the sign on uneven / rough surfaces.
- 2. Do not cover the ventilation holes on the rear of the sign.
- 3. Do not remove and / or handle the battery or any internal components. Any unauthorised changes /modifications will void all warranties.
- 4. Do not use corrosive liquids to clean the glass surface. Please use non-woven fabrics, cotton and neutral cleaning agent.
- 5. Sign is not suitable for wall mounting.
- 6. When moving the sign walk, don't run.
- 7. Remove and dispose of all packing materials in a responsible manner.
- 8. Do not hang any items, objects, covers, etc on the sign.
- 9. Use only the originally supplied charger for re-charging purposes.
- 10. Do not charge the sign in direct sunlight.
- 11. Do not overcharge the battery.
- 12. Always remove the charger once the battery is fully charged.
- 13. Charge the sign once the battery indicator shows one or two orange lights.
- 14. NEVER leave the charger inserted in the sign once it has been fully charged.
- 15. ALWAYS ensure the sign is switched OFF before inserting the charger.
- 16. Do not expose the sign to direct sunlight.

Components

Digital A-Frame x 1

Charger x 1

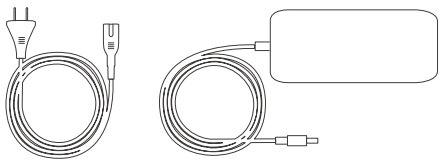


Remote Control x 1

Antenna x 1



MITSUMARU
SMART DIGITAL SIGNAGE

 
Dimensions

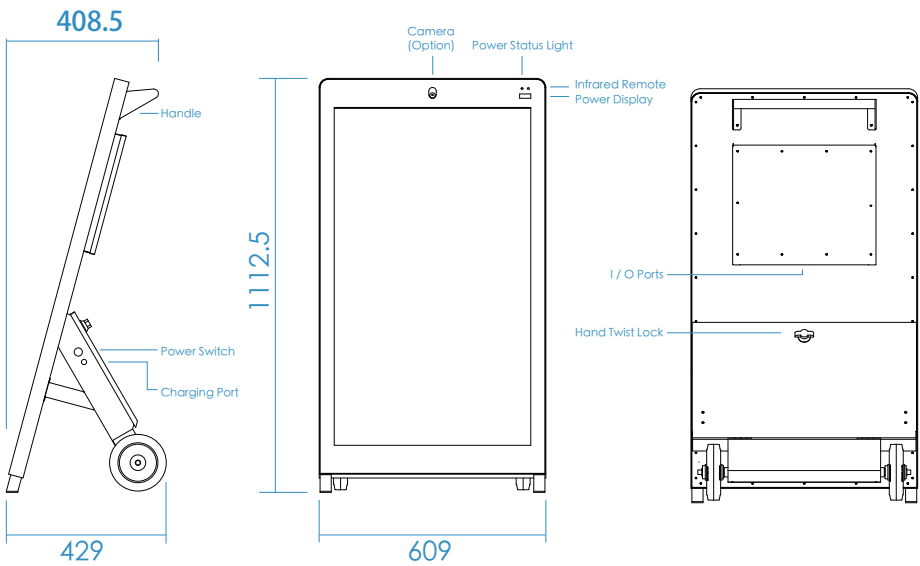


I / O Ports



 MITSUMARU
SMART DIGITAL SIGNAGE

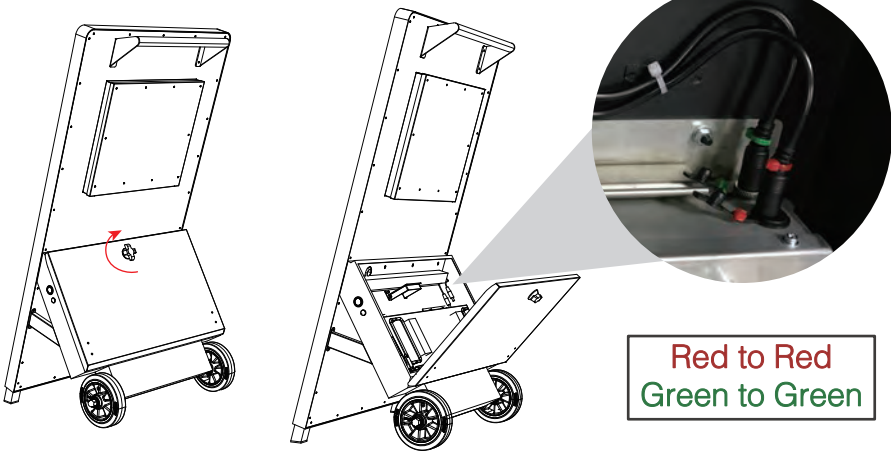


 1. Once your sign is unpacked, open the rear cover as shown. Connect the plugs into the battery as shown ensuring the red plug into the red socket and green plug into the green socket.

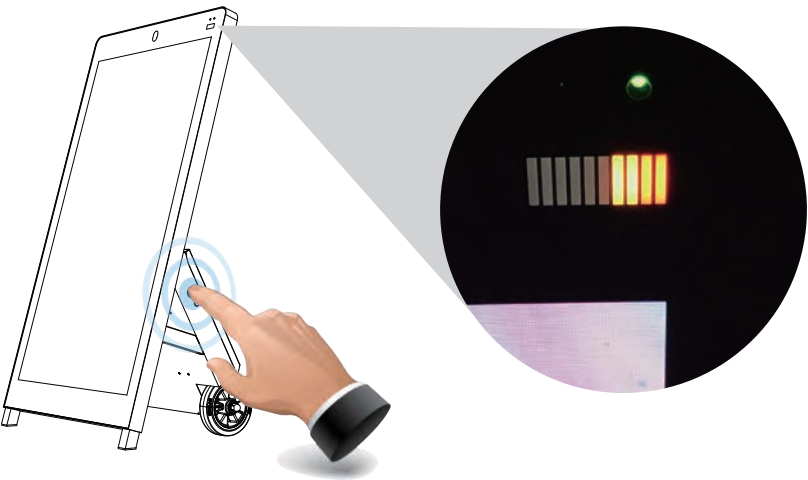


2. Switch the sign on. If orange LED's appear (as pictured) switch the sign off and insert the charger. Switch the sign back on and wait until the battery is fully charged. Once the battery indicator shows a fully charged battery UNPLUG the charger from the sign.

 MITSUMARU
SMART DIGITAL SIGNAGE

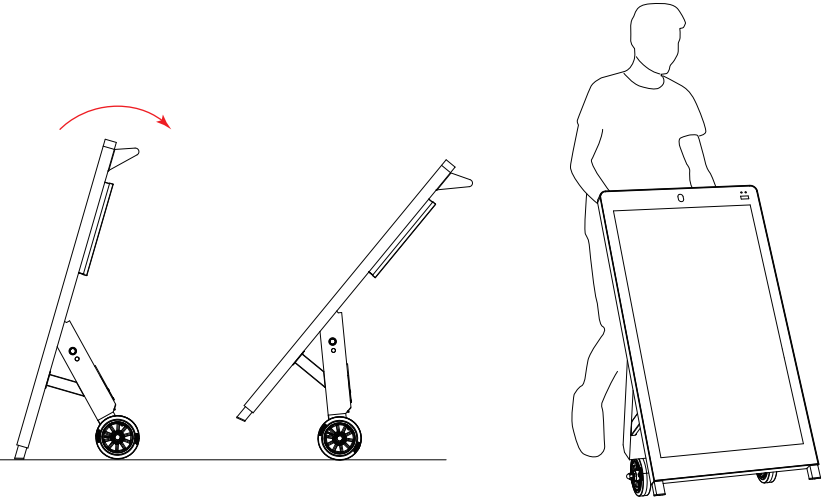

3. Move the sign to its desired location.

 CHARGING INSTRUCTIONS

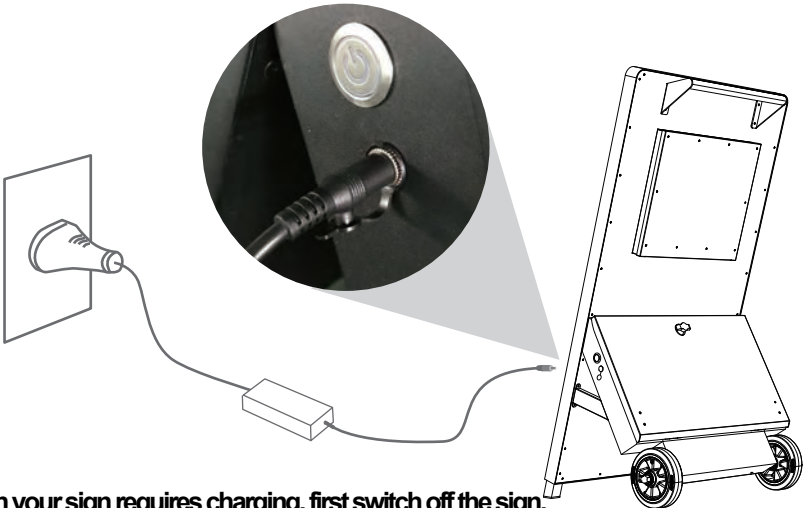

- 1. When your sign requires charging, first switch off the sign.
- 2. Plug in the charger and switch the sign back on.
- 3. Once the battery is fully charged UNPLUG the charger.
- 4. NEVER leave the charger plugged in once a full charge is reached.