

How to Use

- 1. Insert the AC plug into any standard 220-240V AC outlet.
- 2. Adjust multiple pencil guide for best fit.
- 3. Simply insert pencil into the pencil opening and the sharpener will start sharpening immediately.

4. At the end of the sharpening cycle, the "AUTO STOP" feature will operate by automatically stopping the cutter blades away from the pencil. Note: some pencils with uncertered lead (pencil defect) will not sharpen evenly. 5. Pull out the pencil when you feel the end of the sharpening cycle.

6. For smooth trouble-free operation, empty shavings tray frequently.



LED/H



- 1. To prevent motor damage, remove the pencil from the
- 2. DO NOT insert hard material such as pens, chalk crayons or soft colouring pencils which will damage or clog
- the cutter blades. 3. If the motor should overheat, a safety device (thermal switch)

DO NOT INSERT



-4-



pencil opening when point is sharpened.

will operate to protect the motor from damage. If this should occur, unplug the power cord and let the unit cool down for approximately 40 minutes. During this time the thermal switch will cool and reset automatically. 4. The cabinet can be cleaned with a cloth, dampened with a mild soap and water solution. Ensure sharpener is completely dry before operation. Do not use scouring powder, benzene, gasoline or thinner.

LED/H

Model 11333

Operating Instructions **6 Hole Electric Pencil Sharpener**



Before operating this unit, please thoroughly read these instructions