

12 Bay Mobile Storage






Code: EMTT12

Contents

- 1x Base Panel
- 1x Top Panel
- 2x Side Panels
- 2x Centre Panels
- 3x Back Panels
- 3x Back Panels
- 9x Shelves
- 64x Cam Locks
- 64x Cam Fasteners
- 4x Heavy Duty Casters
- 16x Self-Tapping Screws
- 16x Washers

Unpack contents and lay out on floor

1. Identify each panel. Insert all cam locks and cam fasteners into place on each panel. Lay the 3 back panels on the floor with cam locks facing up.
2. Place one centre panel upright between two back panels (1).
3. Slide cam fasteners into corresponding holes on back panels. Lock into place. Attach 3 shelves to either side of the upright centre panel (2).
4. Attach the second upright centre panel.
5. Attach the remaining 3 shelves to the second centre panel (3). Attach the left and right side outer panels.
6. Attach top panel.
7. Attach bottom panel (identified by the pin holes on bottom of panel for castors). Turn upside down so bottom facing up.
8. Attach the 4 castors using the 16 self-tapping screws and washers.
9. Turn unit upright and insert your selection of colourful Tote Trays or natural Wicker Baskets (4).

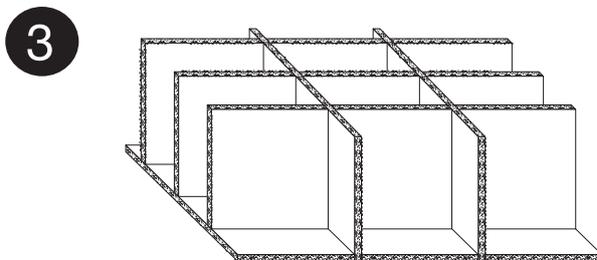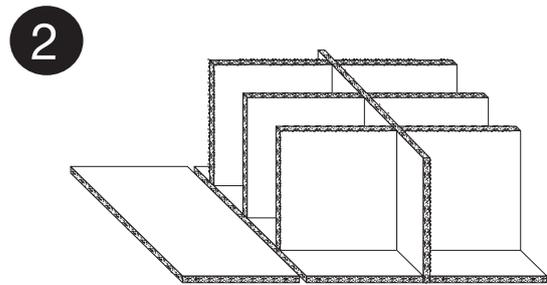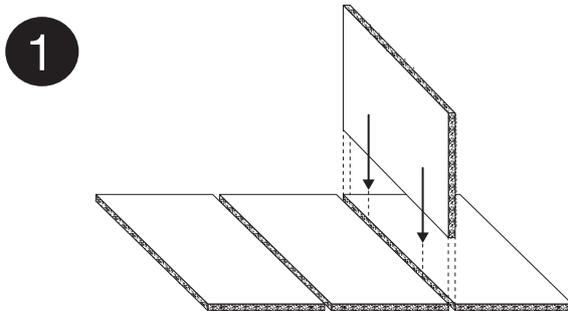

NSW Head Office

5 Liberty Rd,
Huntingwood,
NSW 2148

QLD

17 Moonbi Street
Brendale,
QLD 4500

VIC

U13, 69 Mark Anthony Dr,
Dandenong South
VIC 3175

WA

47 Abbott Road,
Perth Airport
WA 6105

NZ

49 Station Rd,
Papatoetoe, Auckland NZ
2025