

# 16 Bay Mobile Storage







Code: EMTT16

## Contents

- 1x Base Panel
- 1x Top Panel
- 2 x Side Panels
- 3x Centre Panels
- 4x Back Panels
- 12x Shelves
- 84x Cam Locks
- 84x Cam Fasteners
- 6x Heavy Duty Casters 24 x Self-Tapping Screws
- 24x Washers

## Unpack contents and lay out on floor

1. Identify each panel. Insert all cam locks and cam fasteners into place on each panel. Lay the 4 back panels on the floor with cam locks facing up.
2. Place one centre panel upright between two back panels (1).
3. Slide cam fasteners into corresponding holes on back panels. Lock into place. Attach 3 shelves to either side of the upright centre panel (2).
4. Attach the remaining 2 upright centre panels. Attach the remaining 6 shelves on either side (3). Attach the left and right side outer panels.
5. Attach top panel.
6. Attach bottom panel (identified by the pin holes on bottom of panel for castors). Turn upside down so bottom facing up.
7. Attach the 6 castors using the 24 self-tapping screws and washers.
8. Turn unit upright and insert your selection of colourful Tote Trays or natural Wicker Baskets (4).

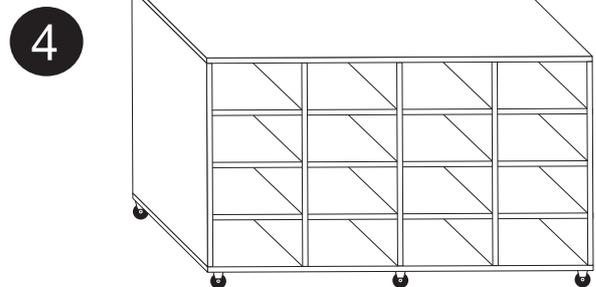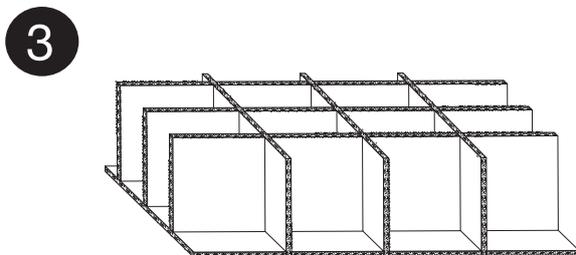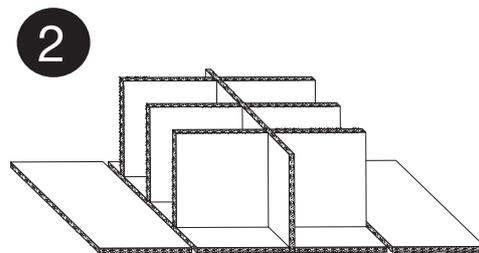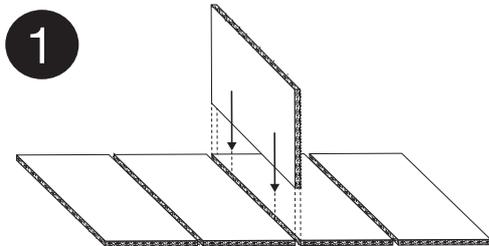

### NSW Head Office

5 Liberty Rd,  
Huntingwood,  
NSW 2148

### QLD

17 Moonbi Street  
Brendale,  
QLD 4500

### VIC

U13, 69 Mark Anthony Dr,  
Dandenong South  
VIC 3175

### WA

47 Abbott Road,  
Perth Airport  
WA 6105

### NZ

49 Station Rd,  
Papatoetoe, Auckland NZ  
2025